

MANUEL D'UTILISATION - Batterie Externe NEBO 5K

CONTENU DE L'EMBALLAGE :

- Batterie externe NEBO 5K
- Câble USB-C vers USB-C
- Adaptateur USB-C vers USB-A

VUE D'ENSEMBLE :

1. Bouton marche/arrêt d'alimentation USB
2. Indicateurs LED du niveau de charge
3. Deux ports de sortie USB-A
4. Port USB-C bidirectionnel
5. Entrée de charge USB Micro
6. Câble USB-C vers USB-C
7. Adaptateur USB-C vers USB-A

INSTRUCTIONS D'UTILISATION :

CHARGEMENT DE VOTRE BATTERIE EXTERNE 5K

IMPORTANT : Avant la première utilisation, chargez complètement le produit.

Peut être chargé via l'entrée USB Micro ou le port USB-C bidirectionnel.

Temps de charge : 2 à 3 heures.

INDICATEURS LUMINEUX :

Voyant clignotant = en charge

Voyants fixes = complètement chargé

CHARGER VOS APPAREILS ÉLECTRONIQUES :

Utilisez le câble approprié fourni avec le produit. Vous pouvez charger deux appareils en même temps.

La charge commence automatiquement une fois connecté.

Peut être chargé et déchargé simultanément.

SPÉCIFICATIONS :

Capacité de la batterie : 5,000mAh / 18.5Wh 3.7V

Entrée USB-Micro : 5V 2A

Entrée USB-C : 5V 2A

Sortie USB-C : 5V 2.1A

Sorties USB-A 1 & 2 : 5V 2.1A

Sortie Max : 10.5W

Sortie totale (USB-C + USB-A1) : 5V 2.1A

Dimensions : 98 x 63 x 13mm

Poids : 105g

Températures de fonctionnement : Charge : 10°C - 40°C / Décharge : -10°C - 40°C

Température de stockage : -20°C - 35°C

NEBO[®]

5K POWER BANK



USER MANUAL

SAFETY INSTRUCTIONS

FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY OR EXCHANGE REQUESTS, PLEASE CONTACT US.

1-800-255-6061

YOUR SAFETY IS IMPORTANT TO US.

Please read instructions carefully and utilize the proper precautions before operating this equipment. Save instructions for future reference.

- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire, or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your power bank may cause electric shock to users and damage equipment.
- Keep your power bank dry and away from moisture, water, and corrosive materials.
- Do not expose your power bank to moisture, water, rain, or snow.
- Keep your power bank away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your power bank may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict air flow around the power bank during operation.
- Do not disassemble your power bank. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your power bank if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush, or subject to mechanical shock.
- Keep away from children and pets. The power bank, along with its accessories are not toys.
- Make sure the power bank's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.




WARNING

IF THE PRODUCT OVERHEATS, BECOMES SWOLLEN, OR IS DEFORMED IN ANY WAY, IMMEDIATELY STOP USING AND CONTACT CUSTOMER SERVICE.

OVERVIEW

- NEBO 5K POWER BANK
- USB-C to USB-C Cable
- USB-C to USB-A Adapter

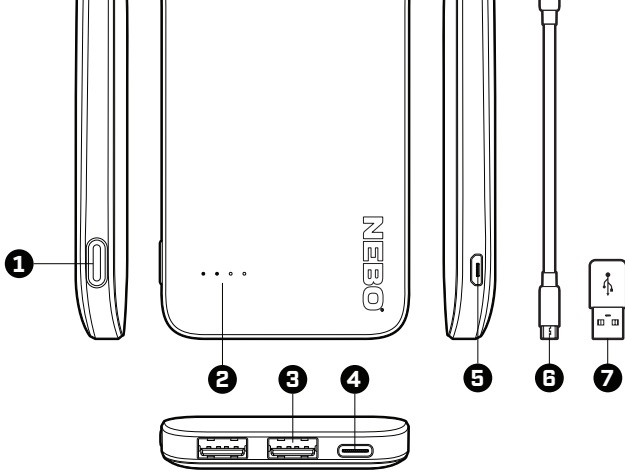

- 1 | USB Power ON/OFF Button
2 | LED Power Level Indicators
3 | Dual USB-A Output Ports
4 | USB-C Bi-directional Port


- 5 | USB Micro Charging Input
6 | USB-C to USB-C Cable
7 | USB-C to USB-A Adapter

OPERATING INSTRUCTIONS

CHARGING YOUR 5K POWER BANK

IMPORTANT: Before using your product for the first time, fully charge it.

The product can be charged using either the USB Micro input port, or the USB-C bi-directional port. The total charge time is 2 to 3 hours.

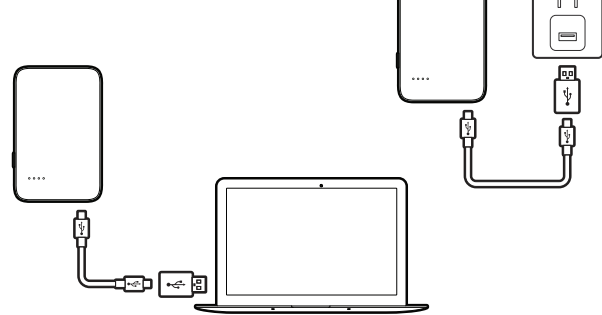


NOTE:

- While charging, the LED indicators will illuminate indicating the charge percentage.
- When fully charged, disconnect the charging cable.

POWER LEVEL INDICATOR

 INDICATOR LIGHTS



Blinking light indicates recharging

AMOUNT OF CHARGE

- 0% - 24%
25% - 49%
50% - 74%
75% - 100%



Solid lights indicate fully charged

CHARGING YOUR ELECTRONIC DEVICES

Use the appropriate charging cable that came with the product to charge your electronic device. You can charge up to two devices simultaneously. Once your electronic device is connected, it will begin charging automatically.

NOTE:

- You may also use the USB cable that was supplied with your electronic device.
- The product may be charged and discharged simultaneously.

SPECIFICATIONS

Battery Capacity.....	5,000mAh / 18.5Wh 3.7V
USB-Micro Input.....	5V 2A
USB-C Input.....	5V 2A
USB-C Output.....	5V 2.1A
USB-A 1 & 2 Output.....	5V 2.1A
Max Output.....	10.5W
Total Output (USB-C + USB-A1).....	5V 2.1A
Dimensions.....	3.86 x 2.48 x 0.51in (98 x 63 x 13mm)
Weight.....	0.23lbs (105g)
Operating Temperature.....	Charge: 50°F - 104°F (10°C - 40°C) Discharge: 14°F - 104°F (-10°C - 40°C)
Storage Temperature.....	4°F - 95°F (-20°C - 35°C)

All copyrighted and copyrightable materials, including, without limitation, the logo, design, text, graphics, pictures, copywriting and the selection and arrangement ("Materials") thereof are ALL RIGHTS RESERVED

Copyright © 2024 Alliance Sports Group, L.P.

Alliance Consumer Group
700 Henrietta Creek Road
Roanoke, Texas 76262
800.255.6061



WARNING
Cancer and Reproductive Harm
www.P65Warnings.ca.gov